 


Classic Collection Multi-Function Control

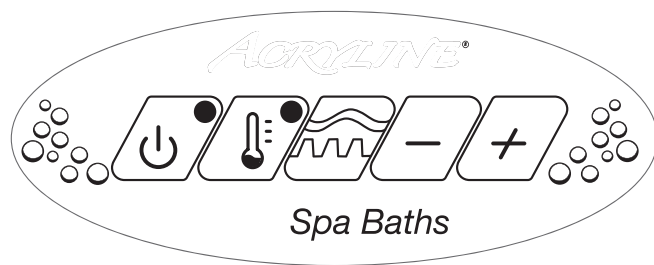


(optional)




On/Off Key

Use On/Off key to turn blower on or off. The blower is set to run automatically for 20 minutes. The indicator light in the upper right corner will light up when the blower is on.

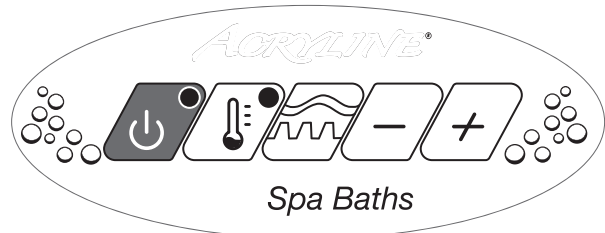


Air Heater Key

Use Air Heater Key to turn the heater element on or off. The indicator in the upper right corner of the key will blink when the heater element is on

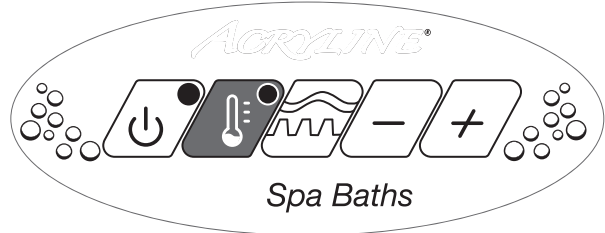


Mode Key

Pressing Mode key while the blower is on will send the blower into "Wave" mode. Pressing Mode key a second time while the blower is on will send the blower into "Pulse" mode. Pressing a third time will revert the blower to "Normal" mode.

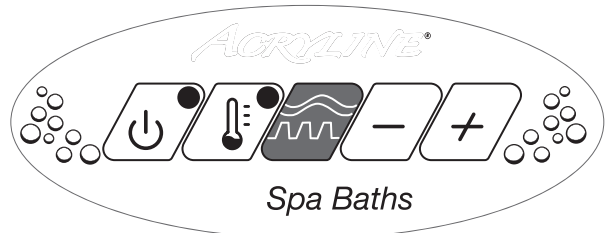

+ & - Keys

In "Normal" mode, these keys allow the user to change the blower speed.

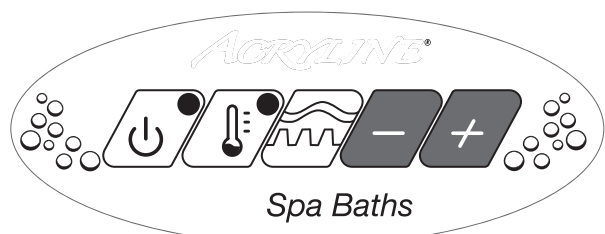

Daily Purge

The system can be programmed for a one-minute purge that will be repeated every day at the same time as it is originally set. To set the daily purge, press and hold the + key for 8 seconds. The "On/Off" indicator will flash twice to confirm purge and a purge will start. This same indicator will flash every four seconds for as long as the daily purge is programmed. Repeat process to disable.

