



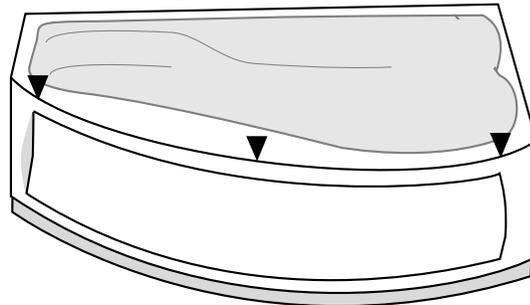

# INSTALLATION INSTRUCTIONS for EDEN bath skirt

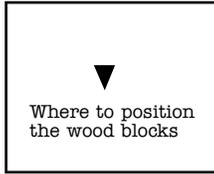

**IMPORTANT**  
Make a trial fit of the skirt  
before finalizing installation.


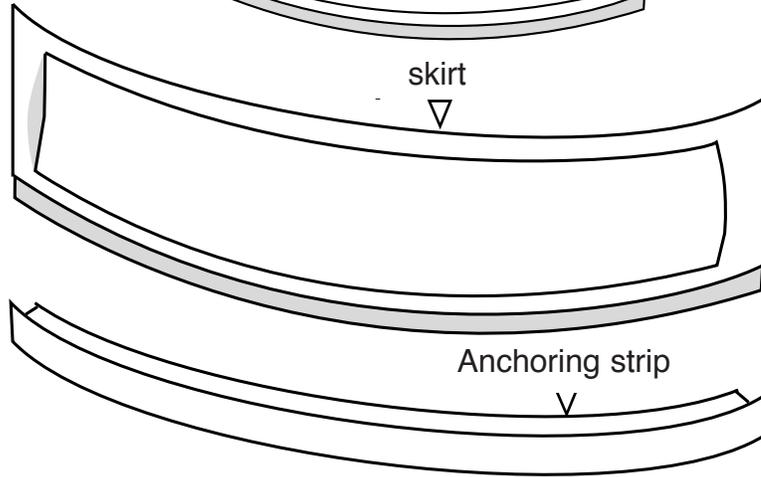


PHOTO A

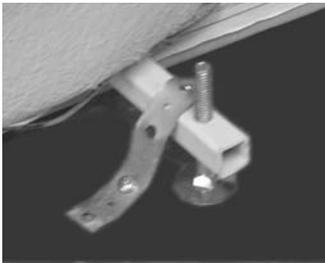

**1**

Once the leveled installation of the tub is completed, fix adjustable legs to floor (photo A). Glue the wood blocks beneath the rim of the tub and let it dry until blocks are solidly in place. With a level trace a line on the floor following the tub rim. (figure

**2**

Secure the anchoring strip to the floor 2" inside the line. (see figure 2)

**3**

Insert the top of the skirt under the flange of the tub and then screw the skirt to the anchoring strip. Use the 6 predrilled holes as guides.

figure 2


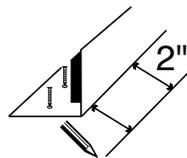


figure 1


wood block

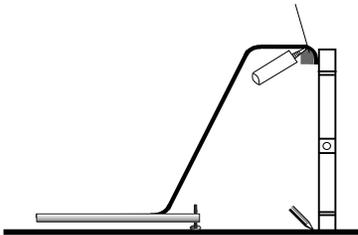

**note:**

our skirt has been designed to fit in a variety of installation applications. In some cases it may be necessary to slightly trim the ends of the skirt. you must use a circular fine tooth saw from behind (the fiberglass unfinished side).

Bloc de bois  
wood block

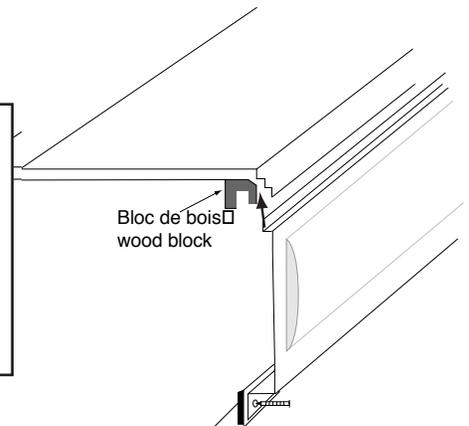


November 2006

Tel: (732) 441-3990 Fax: (732) 441-3991





# INSTALLATION INSTRUCTIONS

## for a neo-angle bath skirt

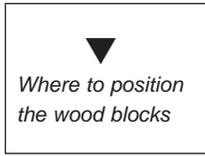


### IMPORTANT

Make a trial fit of the skirt before finalizing installation.

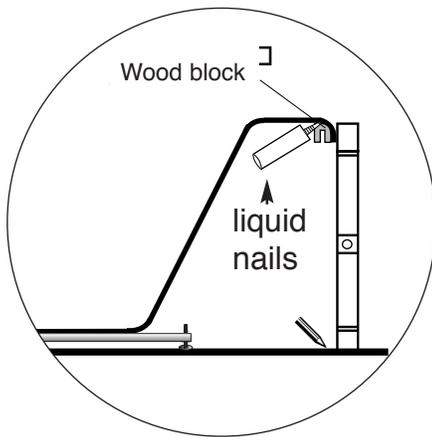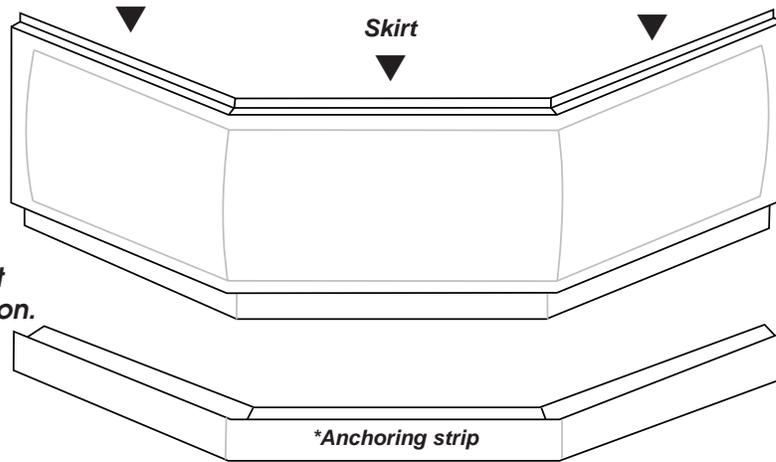


1

Once the leveled installation of the tub is completed, fix adjustable legs to floor (photo A). Glue the wood blocks beneath the rim of the tub and let dry until blocks are solidly in place. With a level trace a line on the floor following the tub rim. (see figure 1)

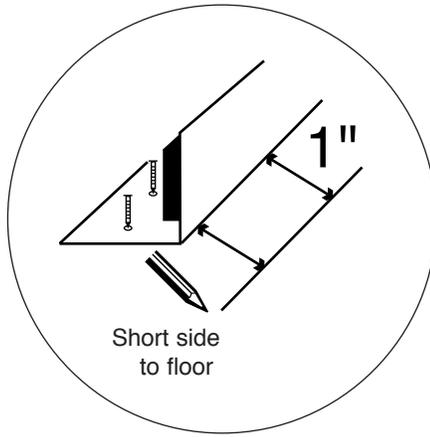

2

Secure the anchoring strip to the floor 1" inside the line. (see figure 2)

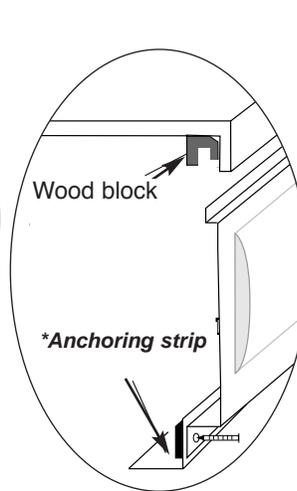

3

Insert the top of the skirt under the flange of the tub and then screw the skirt to the anchoring strip. Use the 6 predrilled holes as guides. (see figure 3)


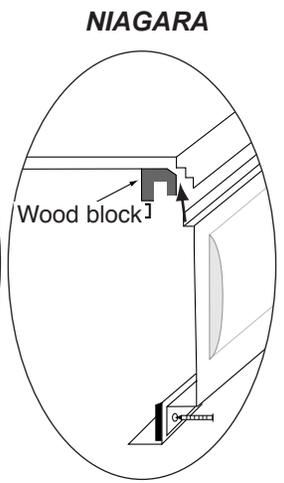


PHOTO A

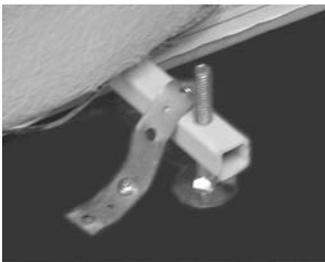

### note:

our skirt has been designed to fit in a variety of installation applications. In some cases it may be necessary to slightly trim the ends of the skirt. you must use a circular fine tooth saw from behind (the fiberglass unfinished side).



November 2006

Tel: (732) 441-3990 Fax: (732) 441-3991




# INSTALLATION INSTRUCTIONS

## for a round front corner bath skirt

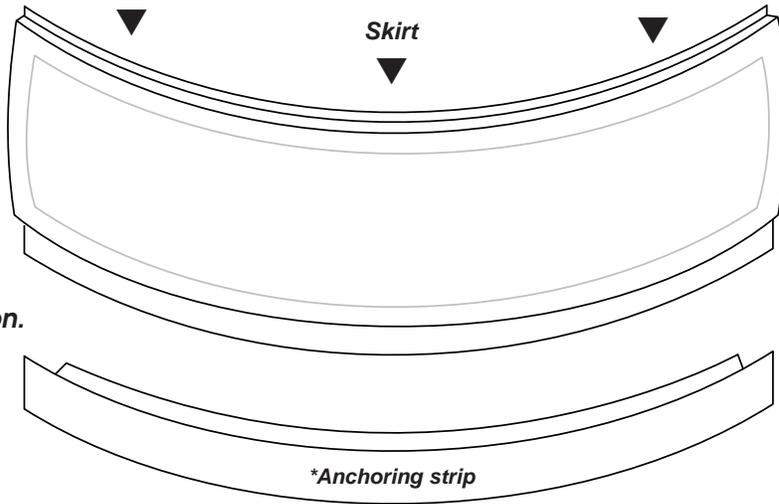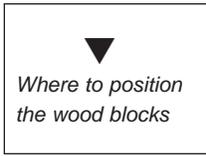


**IMPORTANT**  
 Make a trial fit of the skirt  
 before finalizing installation.

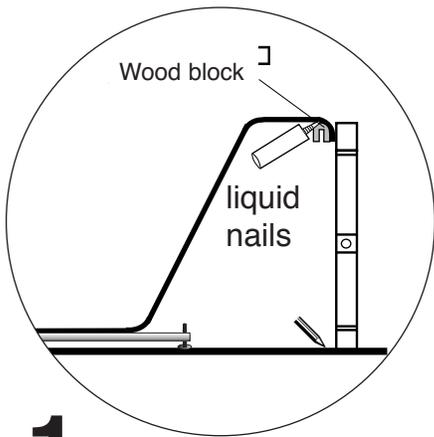

**1**

Once the leveled installation of the tub is completed, fix adjustable legs to floor (photo A). Glue the wood blocks beneath the rim of the tub and let dry until blocks are solidly in place. With a level trace a line on the floor following the tub rim. (see figure 1)


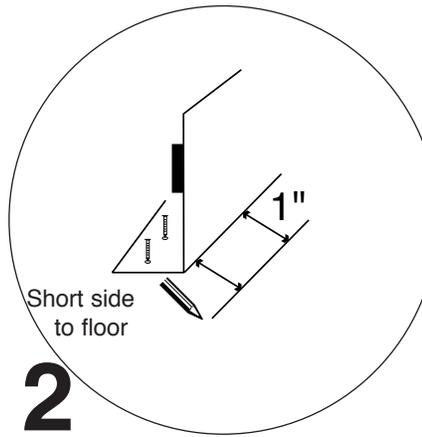


**2**

Secure the anchoring strip to the floor 1" inside the line. (see figure 2)

**RENDEZ-VOUS**


**MONTEGO**

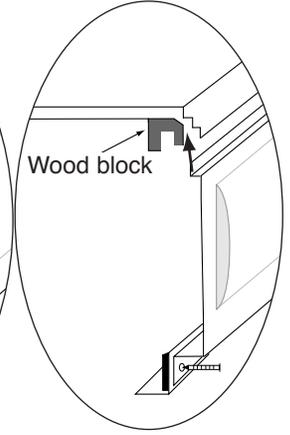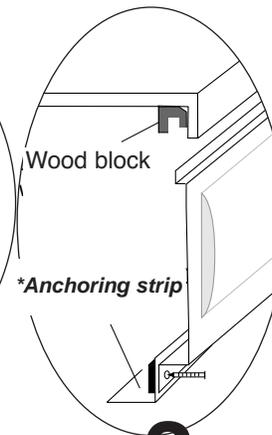

**3**

Insert the top of the skirt under the flange of the tub and then screw the skirt to the anchoring strip. Use the 6 predrilled holes as guides. (see figure 3)

PHOTO A

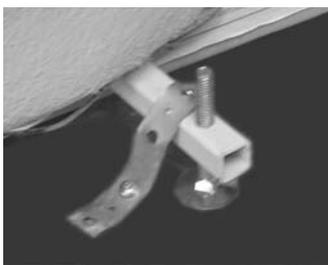

**note:**  
 our skirt has been designed to fit in a va-riety of installation applications. In some cases it may be necessary to slightly trim the ends of the skirt. you must use a circular fine tooth saw from behind (the fiberglass unfinished side).


November 2006

Tel: (732) 441-3990 Fax: (732) 441-3991





# INSTALLATION INSTRUCTIONS

for a *PASSION* skirt

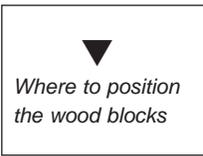


## IMPORTANT

**Make a trial fit of the skirt before finalizing installation.**

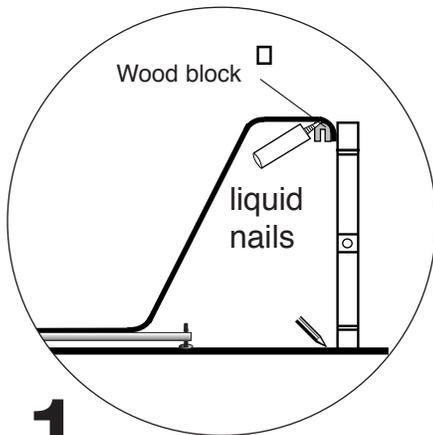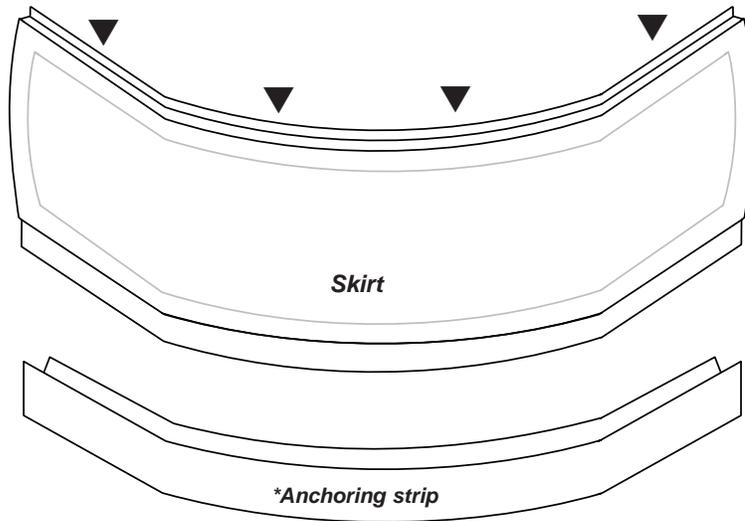


**1**

Once the leveled installation of the tub is completed, fix adjustable legs to floor (photo A). Glue the wood blocks beneath the rim of the tub and let dry until blocks are solidly in place. With a level trace a line on the floor following the tub rim. (see figure 1)

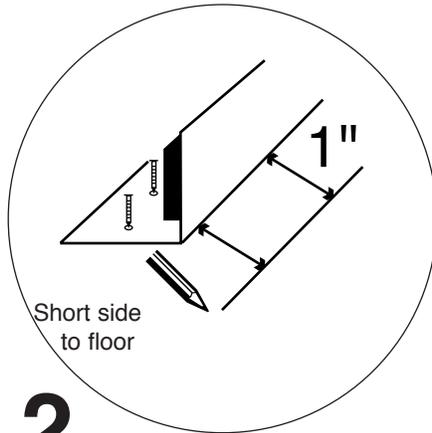

**2**


Secure the anchoring strip to the floor 1" inside the line. (see figure 2)

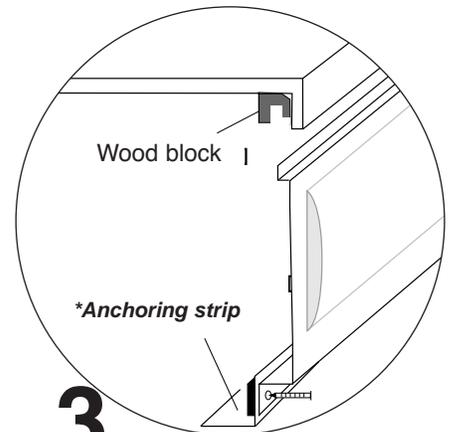

**3**

Insert the top of the skirt under the flange of the tub and then screw the skirt to the anchoring strip. Use the 6 predrilled holes as guides. (see figure 3)

### PHOTO A

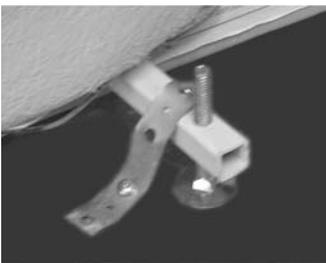

November 2006

Tel: (732) 441-3990 Fax: (732) 441-3991